

ENGINE RECOMMENDATIONS

ALL OPERATIONAL AND MAINTENANCE RECOMMENDATIONS, INCLUDING OIL WEIGHTS, LOCATION OF OIL FILLS FOR ENGINE AND GEAR BOX, SPARK PLUG NUMBER, AIR FILTER LOCATIONS AS WELL AS TROUBLE SHOOTING AND WIRING DIAGRAMS ARE FOUND IN THE ENGINE MANUFACTURE'S ENGINE MANUAL THIS IS PACKED WITH EVERY HOIST SOLD BY SAFETY HOIST COMPANY.

NOTE: ENGINES ARE SHIPPED WITHOUT OIL IN THE ENGINE OR GEAR REDUCTION BOX. OIL MUST BE ADDED TO BOTH LOCATIONS OR SERIOUS DAMAGE WILL OCCUR.

PLEASE NOTE, ENGINE WARRANTY IS SERVICED BY AUTHORIZE ENGINE DEALERS. ALL ENGINE QUESTIONS OR PROBLEMS MUST BE DIRECTED TO YOUR LOCAL DEALER. DEALER LOCATIONS CAN BE FOUND ON THE ENGINE MANUFACTURES WEBSITE.