


UNIVERSAL WORK STAND

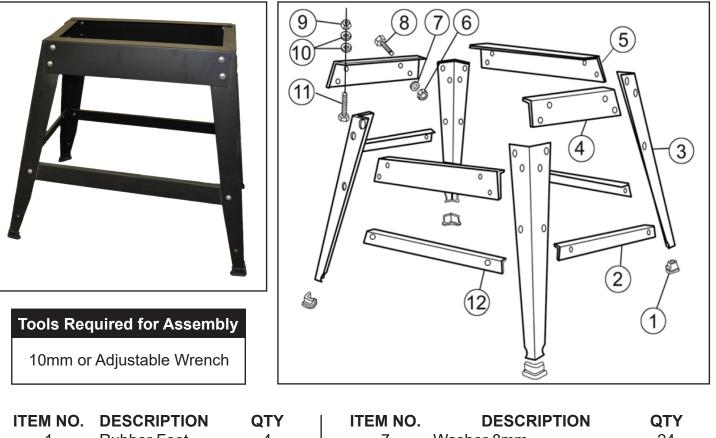

		SA I I
1	Rubber Foot	4
2	Side Beam	2
3	Legs	4
4	Side Panel	2
5	Front Panel	2
6	Hex Nut M6	24

EM NO.	DESCRIPTION	QTY
7	Washer 8mm	24
8	Hex Head Screw M6 x 12	24
9	Hex Nut M6	8
10	Washer 6mm	8
11	Hex Head Screw M6 x 40	4
12	Front Beam	2

To Assemble:

Install one side beam (part #2) and one side panel (part #4) to a pair of legs (part #3) as shown. Make sure that the side beam and the side panel are positioned on the inside of the legs. Add the rubber feet (part #1) to the bottom of the legs.

Repeat this process for the second leg assembly. Now that both assemblies are complete, join them together with two front panels (part #5) and two front beams (part #12).

RIKON Power Tools, Inc. Billerica, MA. 01821